



- 43. 뒷무대장치봉 1 (# 1 REAR STAGE SET BATTEN)
- 42. 뒷무대조명봉 1 (# 1 REAR STAGE LIGHT BATTEN)
- 41. 흑막 (BLACK CYCLORAMA)
- 40. 하늘막 (CYCLORAMA)
- 39. 장치봉 23 (# 23 SET BATTEN)
- 38. 장치봉 22 (# 22 SET BATTEN)
- 37. 장치봉 21 (# 21 SET BATTEN)
- 36. 하늘막상단조명 (SKY CYC. LIGHT) + 머리막 5 (# 5 HOUSE BORDER)
- 35. 끌막 5 (# 5 DRAW CURTAIN)
- 34. 장치봉 20 (# 20 SET BATTEN)
- 33. 장치봉 19 (# 19 SET BATTEN)
- 32. 조명봉 4 (# 4 LIGHT BATTEN) + 머리막 4 (# 4 HOUSE BORDER)
- 31. 장치봉 18 (# 18 SET BATTEN)
- 30. 장치봉 17 (# 17 SET BATTEN)
- 29. 끌막 4 (# 4 DRAW CURTAIN)
- 28. 장치봉 16 (# 16 SET BATTEN)
- 27. 장치봉 15 (# 15 SET BATTEN)
- 26. 장치봉 14 + 후시막 (# 14 SET BATTEN + REAR SCREEN)
- 25. 장치봉 13 (# 13 SET BATTEN)
- 24. 천장음향반사판 3 (# 3 ACOUSTICAL SHELL - CEILING)
- 23. 조명봉 3 (# 3 LIGHT BATTEN) + 머리막 3 (# 3 HOUSE BORDER)
- 22. 장치봉 12 (# 12 SET BATTEN)
- 21. 장치봉 11 (# 11 SET BATTEN)
- 20. 끌막 3 (# 3 DRAW CURTAIN)
- 19. 장치봉 10 (# 10 SET BATTEN)
- 18. 장치봉 9 (# 9 SET BATTEN)
- 17. 장치봉 8 (# 8 SET BATTEN)
- 16. 천장음향반사판 2 (# 2 ACOUSTICAL SHELL - CEILING)
- 15. 조명봉 2 (# 2 LIGHT BATTEN) + 머리막 2 (# 2 HOUSE BORDER)
- 12-14. 장치봉 5-7 (# 5 - # 7 SET BATTEN)
- 11. 영시막 (SCREEN)
- 10. 끌막 2 (# 2 DRAW CURTAIN)
- 09. 장치봉 4 (# 4 SET BATTEN)
- 08. 천장음향반사판 1 (# 1 ACOUSTICAL SHELL - CEILING)
- 07. 장치봉 3 (# 3 SET BATTEN)
- 06. 장치봉 2 (# 2 SET BATTEN)
- 05. 조명봉 1 (# 1 LIGHT BATTEN) + 머리막 1 (# 1 HOUSE BORDER)
- 04. 끌막 1 (# 1 DRAW CURTAIN)
- 03. 면막 (HOUSE CURTAIN)
- 02. 장치봉 1 (# 1 SET BATTEN)
- 01. 방화막 (SAFETY CURTAIN)
- 00. 영황선 (ZERO LINE)
- 01. 현수막봉 (PLACARD BATTEN)
- 02. 앞무대조명 1 (# 1 APRON LIGHT)
- 03. 앞무대조명 2 (# 2 APRON LIGHT)